


USER GUIDE

Label Printer

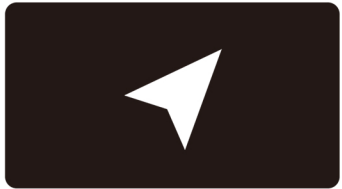

Driver Installation compatible with



Windows computer


Please read the guide before use !

The product nameplate is attached to the bottom of the product.
Please refer to the relevant information

Contents


Appearance Components	1
Internal Components	1
Default Accessories List	2
Loading the Label	2
Loading the Ribbon	4
Connecting the Printer	7
LED Indicator Light & Buzzer	8
Function Button Operation	8
Switch Sensor Modes and Factory Default	9
Printer settings	10

Appearance Components

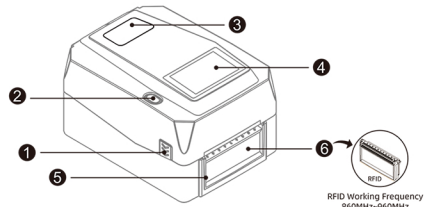


- ① Cover Release Lever
② LED Indicator Lights &Function Keys
③ Viewing Window
④ 4.3 inch Screen(Optional)
⑤ Roller Cutter(Optional)
⑥ RFID(Optional)

Internal Components


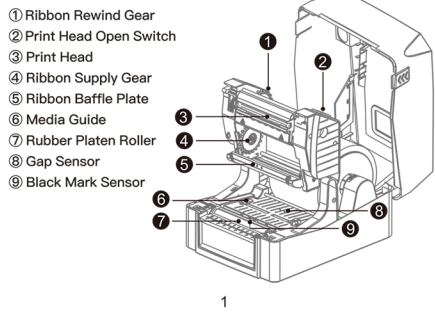


Default Accessories List



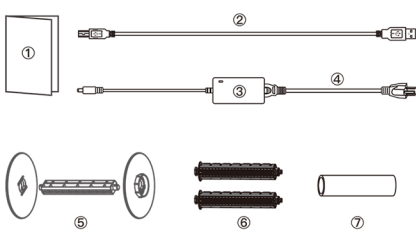


- ① User Guide ② USB Cable ③ Power Adapter ④ Power Cord
⑤ Media Shaft & Baffle Plate x 2 ⑥ Ribbon Shaft x 2
⑦ Ribbon Rewind Paper Core


Loading the Label

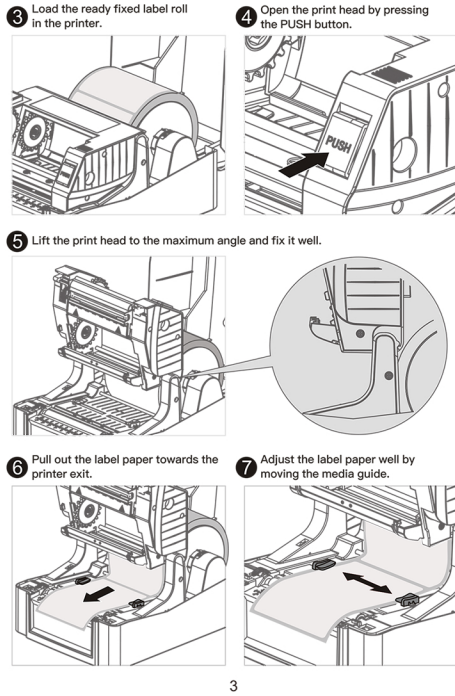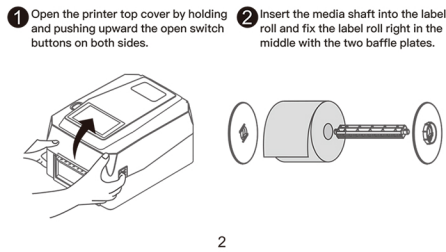

Loading the Ribbon

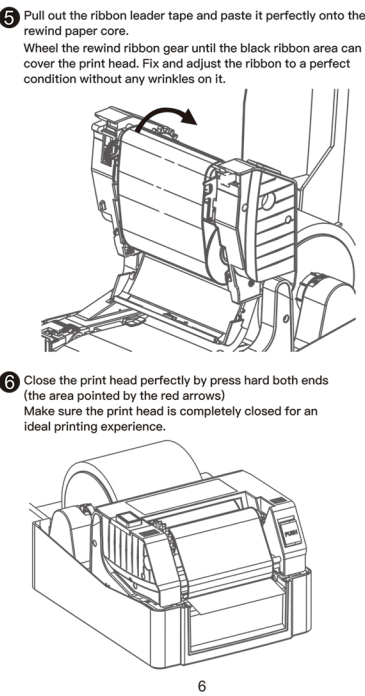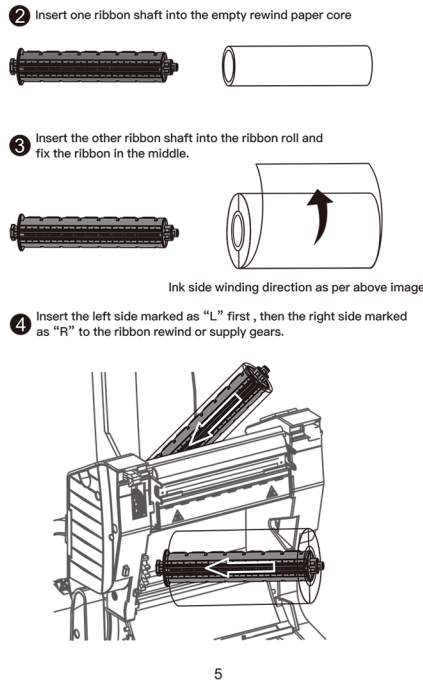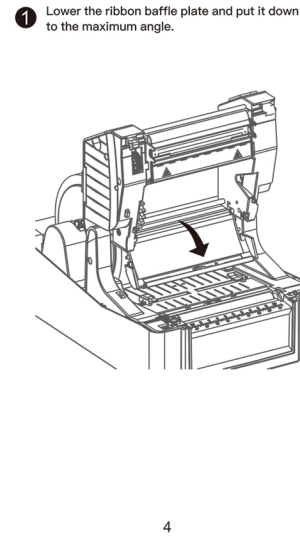

Connecting the Printer

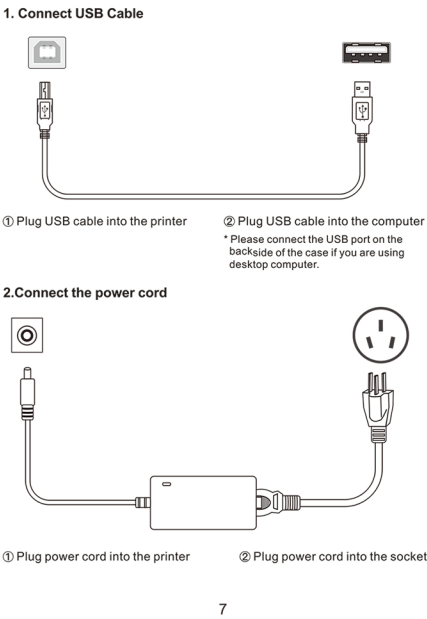

Paper Calibration and Factory Reset operations

Gap Label Calibration

1. Press and hold the Feed Button for approximately 1 second.
2. Release the button immediately when the yellow indicator lights up.
3. In the printer driver's "Printing Preferences," select "Gap" under "Label Type."

Continuous Label Calibration

1. Press and hold the Feed Button for approximately 1 second.
2. Release the button immediately when the yellow indicator lights up.
3. In the printer driver's "Printing Preferences," select "Continuous" under "Label Type."

Black Mark Label Calibration

1. Turn off the power switch.
2. While continuing to hold the Feed Button, turn on the power switch.
3. Release the button promptly when the green indicator flashes.
4. In the printer driver's "Printing Preferences," select "Black Mark" under "Label Type."

Punch Hole Label Calibration

(Note: When printing on perforated paper, if the perforation position is off-center, adjust the black mark sensor to align with the perforations.)

1. Power off the printer.
2. Press and hold the Feed button, then power on the printer (while still holding Feed).
3. Release the Feed button immediately when the green indicator light flashes.
4. In the printer driver's "Printing Preferences," under "Label Type", select "Black Mark".

Factory Reset

1. Power off the printer.
2. Press and hold the Feed button.
3. Release the Feed button immediately when the red indicator light flashes.



Button Functions

Paper Feeding

When the printer is in the ready state (green indicator steadily lit), press the Feed Button once to advance the label to the leading edge of the next label.

Pausing and Resuming Printing

During printing:
Press the Feed Button once to pause printing (green indicator flashes).
Press the Feed Button again to resume the print job.

Printing Self-Test Page

While the printer is in standby mode:
Press the Feed Button twice consecutively to print the self-test page.


Printer Status Indicator Lights & Buzzer

LED Indicator State	Description
Green (steadily lit)	Printer ready / Standby mode
Green (flashing)	Printer paused
Red (steadily lit)	Print head raised
Red (flashing)	Out of paper
Yellow (steadily lit)	Printing in progress
Yellow (flashing)	Print head overheated
Red/Green (alternating flash)	Out of ribbon
Red/Yellow (alternating flash)	Paper jam / Gap detection error
Yellow/Green (alternating flash)	Cutter error
Sound Pattern	Description
Two beeps	Emitted on startup completion
One beep	When red light is steadily lit or flashing

Printer Setting


How to make the print sharper and darker?

1. By default, your printer is set to print at its fastest. Slowing this speed will result in a higher resolution.
2. Increasing the number for your density / darkness will result in a darker print. Setting the density too high will result in unwanted dark lines and/or label getting too hot and sticking mid-way to the printer head. Decreasing this number results in a lighter print.
3. Besides, to clean the print head and rubber platen roller softly with industrial alcohol-sprayed wet cloth also helps to improve the print quality.
4. If the print head is broken or the rubber platen roller worn-out, the print quality also looks not good. In this case, you are suggested to replace the print head or rubber roller.

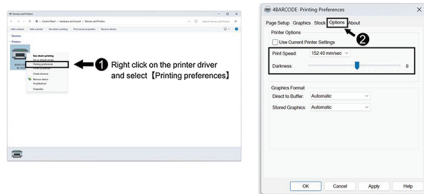

How to set the paper?

You can choose a default size from the list or edit a custom size.

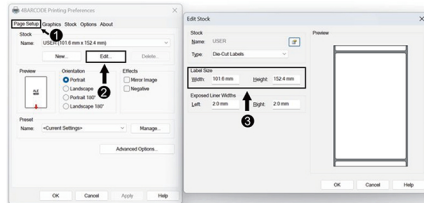

Product Warranty Card

This product has a warranty period of one year starting from the date of manufacture. The print head and rubber roller are warranted for 3 months or up to 30 kilometers of printing, whichever comes first. During the warranty period, obvious physical damage to the print head, such as trauma, scratches, or abnormal wear caused by human factors, is not covered under the warranty.

User Information

Name: _____ Phone: _____
Email: _____ Postal Code: _____
Address: _____

Product Information

Model: _____
Serial Number (SN): _____

Seller Information

Seller Name: (Stamp) _____
Seller Address: _____
Seller Phone: _____
Invoice Number: _____
Date of Sale: _____

Z20250601



Warranty Terms

1. This product has a warranty period of one year starting from the date of manufacture. The print head and rubber roller are warranted for 3 months or up to 30 kilometers of printing, whichever comes first.
2. The following circumstances are not covered under the warranty:
(1) Unauthorized disassembly of the product without permission from our company or authorized repair personnel.
(2) Obvious physical damage to the print head, such as trauma, scratches, or abnormal wear caused by human factors.
(3) Other faults caused by human factors.
3. During the warranty period, any replaced parts will become the property of our company.
4. The user is responsible for shipping the product to our after-sales service department for warranty repairs.
5. Our company reserves the final right to interpret these warranty terms.

*The final interpretation right of the installation guide belongs to our company. Specifications, accessories, and procedures are subject to change without prior notice.